 


65mm

90mm

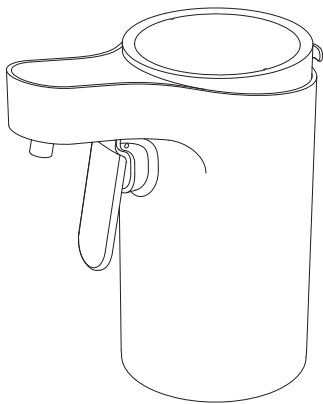

S18

USER MANUAL

Basic Parameters

Model: S18
Main Materials: ABS/PP/
Electronic Components
Rated Input: 5V=1A
Power: 3-3.7W
Battery Capacity: 1200mAh
Charging Time: 1.5-2.5H
Execution standards: GB4706.1-2005

4 Adjustable Gears



Gear 1 /
Liquid Output: 10ml



Gear 2 /
Liquid Output: 20ml




Gear 3 /
Liquid Output: 30ml



Custom Mode /
Liquid Output: Adjustable
as needed


Output Tolerance: ±3ml

Product description

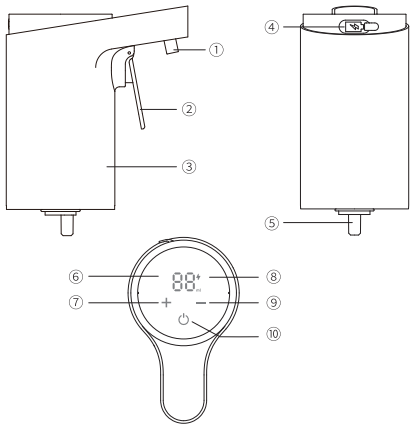


- ① Liquid outlet
- ② Liquid outlet button
- ③ Host
- ④ Type-C charging port
- ⑤ Liquid inlet
- ⑥ Liquid output display screen
- ⑦ Free gear position "+" (increase)
- ⑧ Charging indicator light
- ⑨ Free gear position "-" (decrease)
- ⑩ Power switch/gear switch


Installation/Use

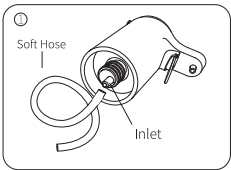

Fix the hose to the inlet

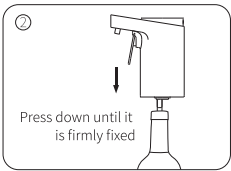

Align the bottom of the product
with the bottle mouth and press
down to firmly connect it with
the container

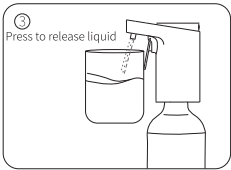

After turning on the machine,
press the liquid release button
once to release liquid as needed
according to the gear position

Operation method

【Power on/off】 Long press the power button for 2 seconds to power on, the liquid discharge display screen lights up, and the default is 1st gear, the screen displays 10mL; Press and hold for 2 seconds again to power off, the display screen and charging indicator light flash 3 times.

【Gear switch】 In the on state, short press the power button once to switch to 2nd gear, the screen displays 20mL, the second short press switches to 3rd gear, the screen displays 30mL; The third short press switches to free gear, the screen displays 00mL; the fourth short press switches back to 1st gear, and the cycle continues.

【Free gear】 In free gear mode, click the "+" button to increase the liquid output as needed; click the "-" button to reduce the liquid output as needed; the free gear discharge volume is 0~100mL; after switching gears, switching back to free gear will record and keep the last set liquid output; if the machine is turned off and then turned on again, the free gear will be set to 0mL.

【Receive liquid】 After turning on the machine, align the receiving container with the liquid outlet, press the liquid output button once to discharge liquid as needed according to the gear, the screen will display the current liquid output, and the liquid output will stop automatically after receiving the corresponding gear liquid.

USB-C charging

Connect the Type-C power supply to charge the machine. It is recommended to fully charge it for the first time. When charging, the charging indicator light is always red. After fully charged, the charging indicator light is always green. When the machine is in charging state, it cannot be turned on and used.

Notes

1. Do not disassemble, modify or repair this product by yourself;
2. If the product is not used for a long time, please charge and maintain it once within three months.
3. Do not immerse this product in water or rinse it directly with water to avoid short circuit.
4. When not in use for a long time, store it in a cool place, avoid direct sunlight or near heat sources.
5. Store this product in a cool place, avoid direct sunlight or near heat sources.
6. Before discarding the device, the battery must be removed from the device;
7. When removing the battery, the device must be powered off;
8. The battery should be disposed of safely.

Tip: When the hand washer is not working, it will automatically enter the standby state without manual shutdown.